

Sofar Inverter Start UP & Shut Down

Valid for

20KTLX-G3
30KTLX-G3
40KTLX-G3
50KTLX-G3

Basic Startup & Shutdown Procedure.

Shutdown

- Turn of AC Isolator (Labeled as AC)
- Turn of DC Isolator (located at bottom of inverter)
- Do not work on anything for 10 Minutes

Turn On

- Turn on DC Isolator
- Turn on AC Isolator
- Inverter will run through startup sequence which will take 2.5 Minutes approx.

Note: If Inverter fails to restart please check RCBO on Sub-Board in Attic labelled as PV Solar.

Faults

Green Light on Inverter Healthy

Orange Light on Inverter Fault. Most likely the RCD feeding the inverter has tripped. Simply reset.